BALLYPALSLS-54



and pull out

bottom forks.



onto truck bed.

the ground.

stored inside

the truck.

in bottom forks

and lock pin.